



ASSEMBLY INSTRUCTIONS FOR 10B1501 KWIK LOCK™ Net Rail System

1. Lay goal flat on the ground face down for installation of KWIK LOCK™ Net Rail System.
2. Lay out net rail on back side of goal in desired location (see illustration). Using the channel as a guide drill 5/32" holes at hole locations (NOTE: When installing KWIK LOCK™ Net Rail System on goals, be sure to leave 13" of space from the end of the top rail to the KWIK LOCK™ Net Rail System. See figure 1.)
3. After drilling each hole, insert and tighten screws.
4. Attach net to goal frame with net clips as shown in figure 2.

Parts List

- | | |
|-----------------------------------|------|
| A) 86" KWIK LOCK™ Net Rail System | (5) |
| B) Screws | (20) |
| C) Net Clips | (40) |


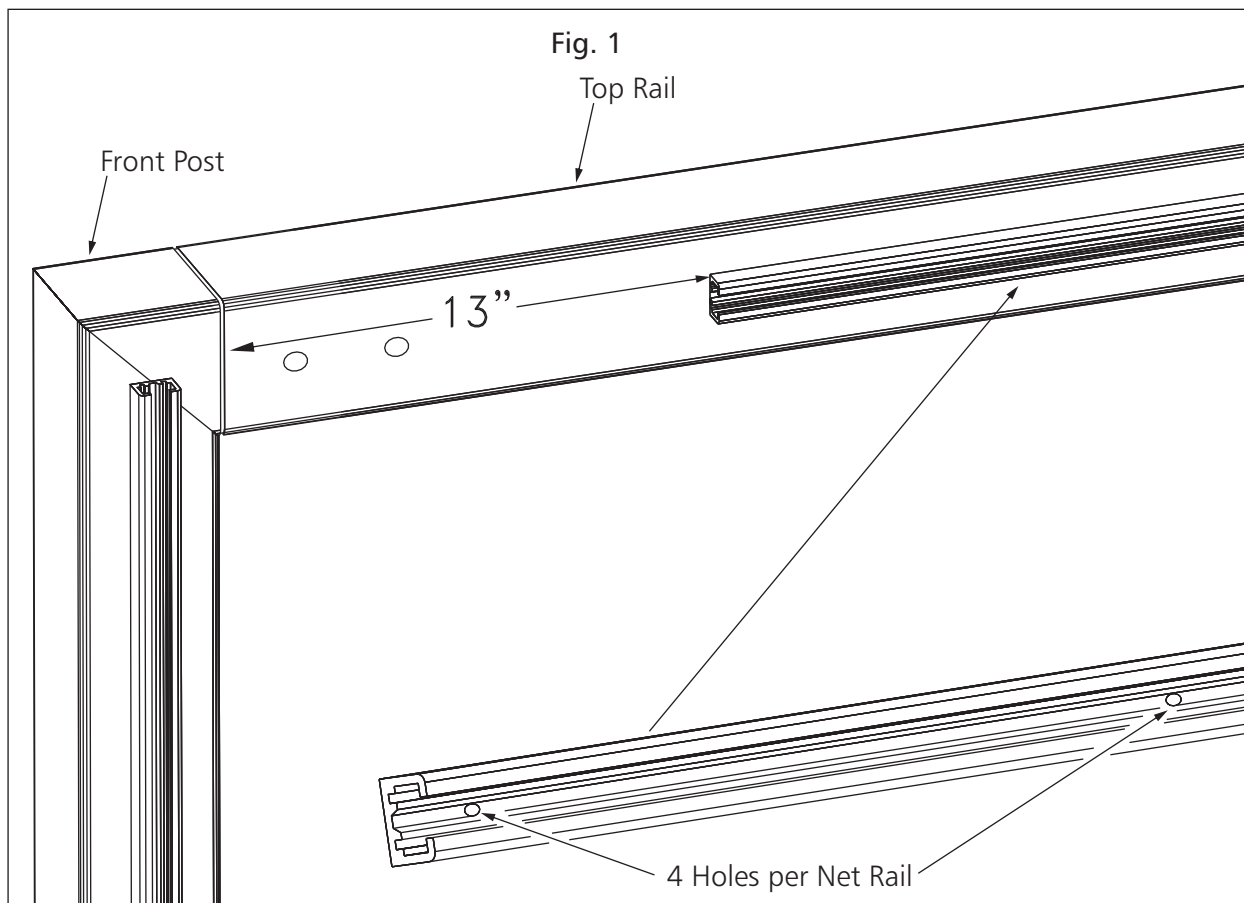


Fig. 2

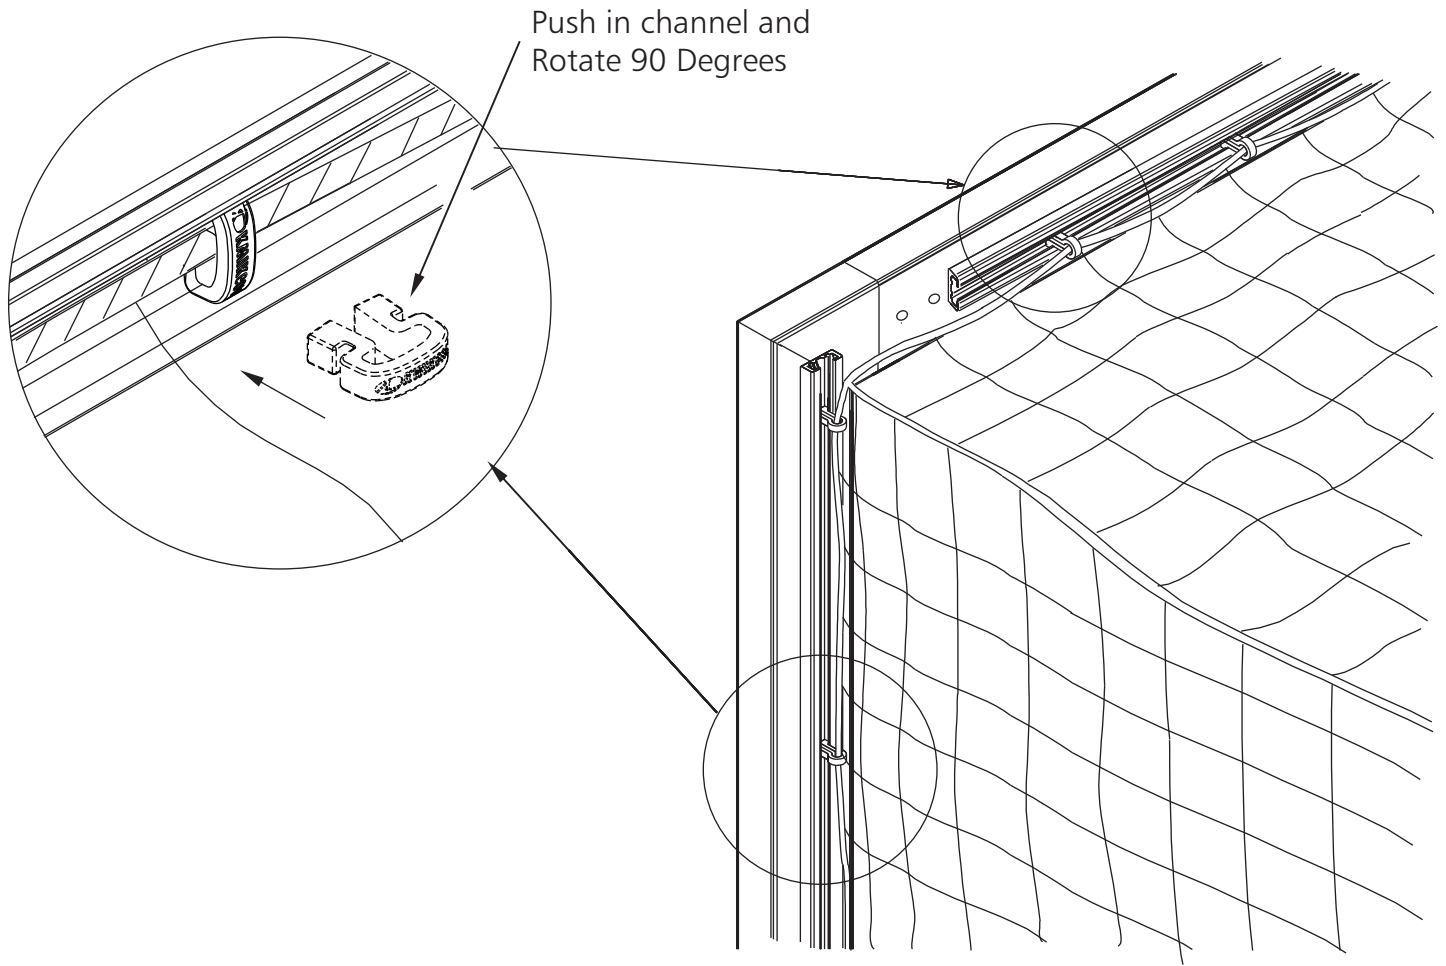

Go to kwikgoal.com for additional product information.